



# INSTALLATION INSTRUCTIONS


## ➤ LOW PROFILE RIDGE VENTILATOR (Flat Skirt)

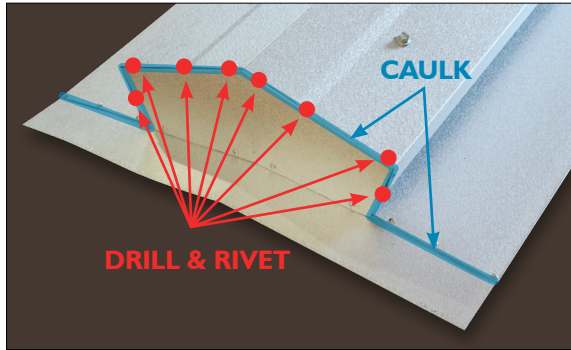

**STEP 1:** For continuous runs, install end cap to vent on each end of the run. Drill 9/64" holes. Insert end cap and rivet (rivets provided). Then, continue through steps 2–6. (If single unit, vent is ready to attach to the roof once end caps are installed on both ends.)

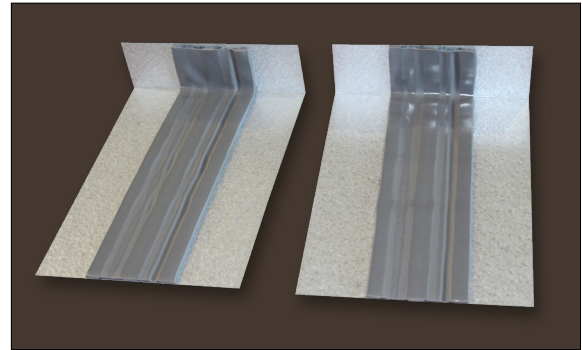


**STEP 2:** Firmly press tape seal on skirt splices as shown.

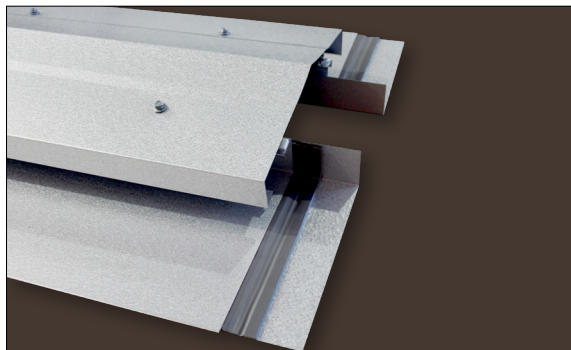


**STEP 3:** Place skirt splices on one end of vent.



**STEP 4:** Butt second vent to first vent, ensuring skirt is firmly pressed on tape seal. Then, attach vent to roof (not pictured.)

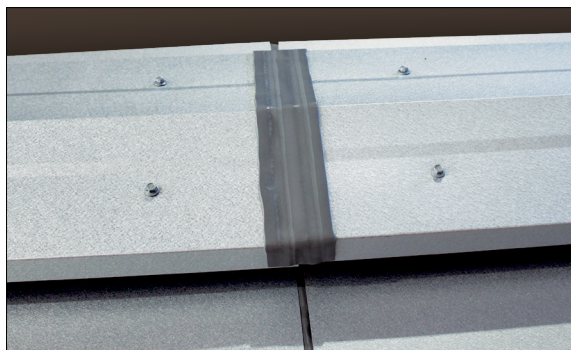

**STEP 5:** Place tape seal over the two top hoods as shown.

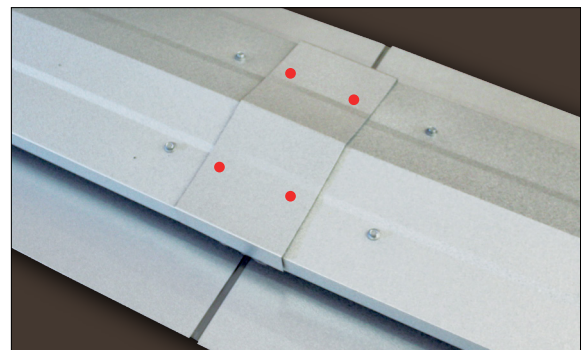


**STEP 6:** Place top hood splice over tape seal and attach with screws, as indicated by dots. (Screws should be placed along same line as hood screws. Do not place screws along seam between each vent.)




SCAN TO SEE  
ASSEMBLY VIDEO

# INSTALLATION INSTRUCTIONS


## ➤ LOW PROFILE RIDGE VENTILATOR (Die Formed Skirt)

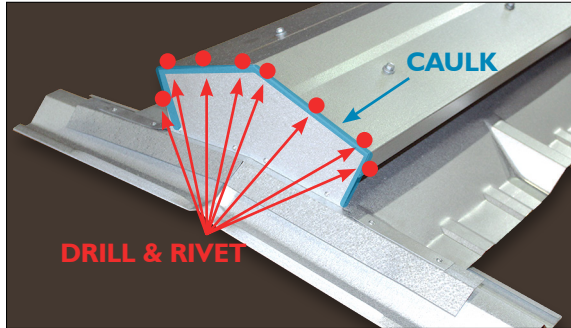


**STEP 1:** For continuous runs, install end cap to vent on each end of the run. Drill 9/64" holes. Insert end cap and rivet (rivets provided). Then, continue through steps 2 – 6. (If single unit, vent is ready to attach to the roof with included end skirts installed under each end cap.)

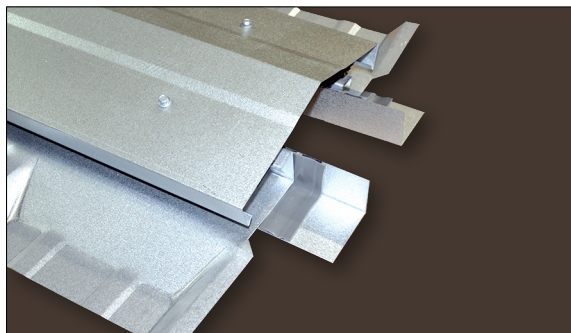


**STEP 3:** Place skirt splices on one end of vent. Then place end skirt underneath skirt splices before placing the assembly over roof rib panel.

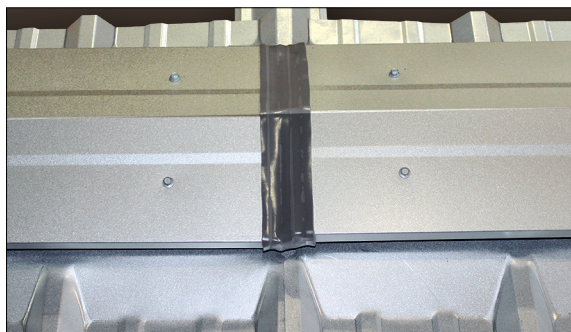


**STEP 5:** Place tape seal over the two top hoods as shown.

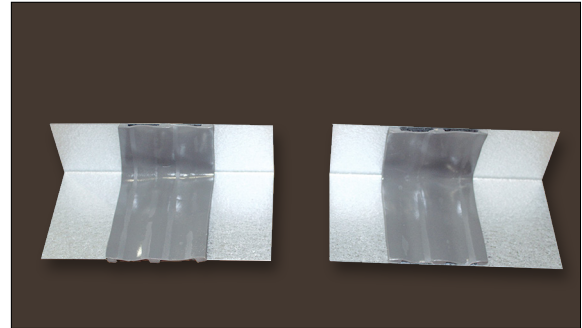

**STEP 2:** Firmly press tape seal on skirt splices as shown.

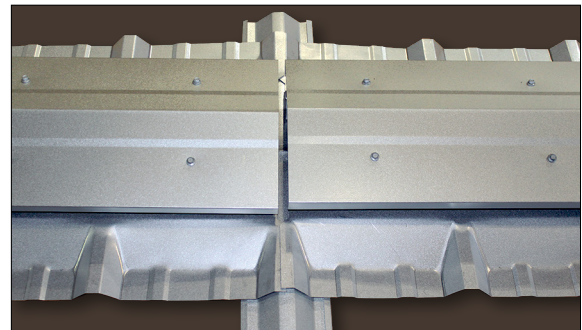

**STEP 4:** Butt second vent to first vent, ensuring vent skirts line up on center line of the end skirt rib. Be sure to attach included tape seal between roof panel and vent skirt to ensure a water-tight seal prior to screwing the vents down to the roof. The vents are ready to attach to the roof at this point. (Not pictured.)

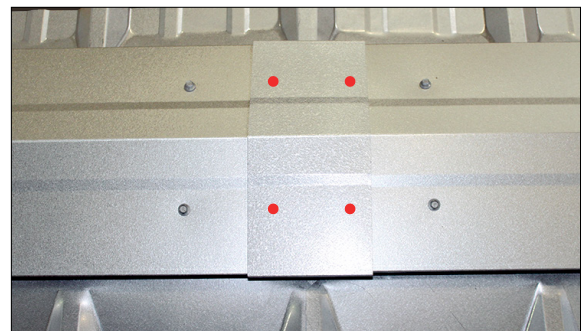

**STEP 6:** Place top hood splice over tape seal and attach with screws, as indicated by dots. (Screws should be placed along the same line as hood screws. Do not place screws along seam between each vent.)



SCAN TO SEE  
ASSEMBLY VIDEO