



ASSEMBLY & INSTALLATION INSTRUCTIONS


➤ LONE STAR VENT

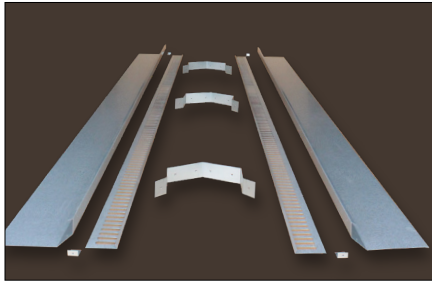


STEP 1: Pre-assembly: Lay out components as shown.

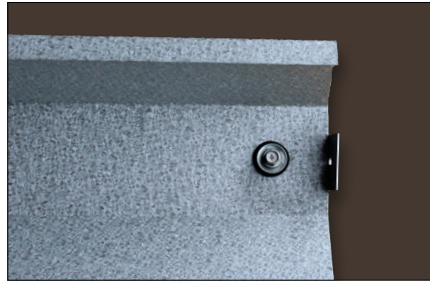


STEP 2: Attach angle to skirt with (1) screw on each end.

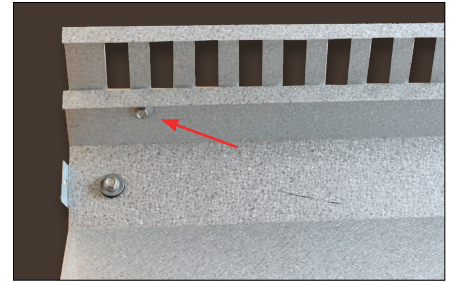


STEP 3: Align screen pre-punched holes on either end of skirt and use (1) screw to attach.

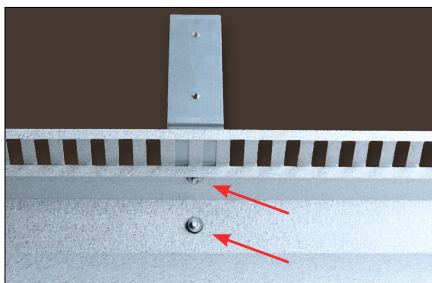


STEP 4: Line up all (3) baffles to the (2) pre-punched holes and use (2) screws to attach.

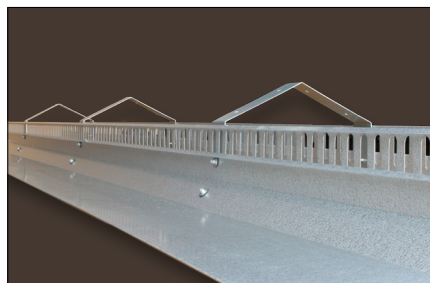

STEP 5: Repeat steps 3 & 4 on other skirt.

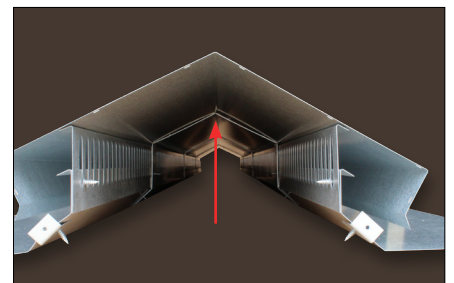


STEP 6: Place top over baffles, making sure to align the peak and align pre-punched holes.

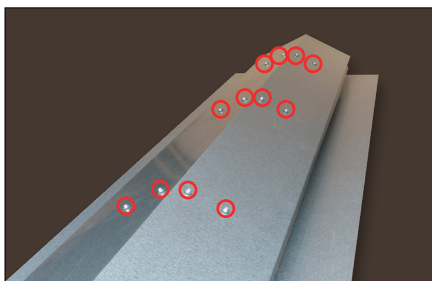


STEP 7: Using (4) screws, attach top to pre-punched holes in baffles. Repeat for the remaining (2) baffles.



STEP 8: Slide end cap into place, making sure pre-punched holes and top break align. Using (1) screw, attach the end cap to hold into proper position. Repeat on opposite end of vent.

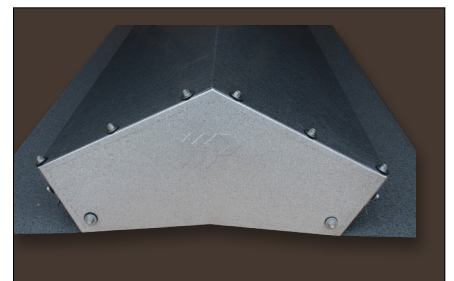

STEP 9: Use remaining screws to attach end cap using the pre-punched holes. Repeat on opposite end of the vent.

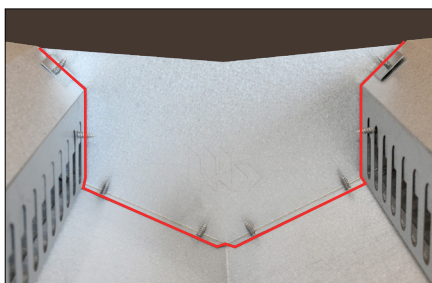

STEP 10: Apply caulking as shown on both ends and install.



STEP 11: When installing, place end of vent on provided end skirt and center with peak. Fasten* to end cap and repeat on opposite end.



Scan to View
Instructions
Online